



Accessory
User Guide





**Welcome to the Singer family
of sewing accessories.**

If you quilt, craft, embroider or sew garments, you will find many presser feet and accessories that will help you save time and help you to express your creativity. This user's guide groups Singer accessories into various sewing categories to help you select the foot that is right for the type of sewing that you prefer to do. Look through the following pages for inspiration and guidance on how easy it is to develop your sewing skills and create beautiful and exciting projects with accessories from Singer.

Table of Contents

Singer Sewing & Embroidery Machines.....	4-7
Utility Garment Sewing	8-16
Decorative & Crafting Sewing.....	17-23
Quilting	24-29
Embroidery	30-31
Additional Accessories.....	32-33
Overlock Sewing and Embellishment.....	34-39
Notions (Needles, Scissors and Dress Forms)	40-53
Index	54-55

Singer® Sewing & Embroidery Machines



To determine what presser feet and accessories fit your Singer sewing machine, identify your model of machine based on the illustrations listed on the next pages. Machines are coded by group, each code that is compatible to a presser foot or accessory will be listed under that foot or accessory. Look for the code pictured above the machine. If the code for your machine does not appear under a presser foot or an accessory, then this foot or accessory cannot be used with your machine. Step by step instructions teach you how to use each presser foot. If your machine is not listed below, please visit our website www.singer.com for more information.

MA Series



Locust	Simple
1507	1732
1507WC	2932
1525 / 1725	3116
1748	3221
8280	3232
8280L	3210 Simple
8280 SMART II	3223 Simple
	3229 Simple

Mercury I	Tradition
1105	2250
1116	2259
1120	2263
1130	2273
7020	2277
	2282

Promise
1408
1409
1412 Promise
1512 Promise II

MB Series



Heavy Duty	Talent
4411	3321
4423	3323S
4432 HD	3323
5511	
5523	
5532	
44S	

MC Series



Fashion/Inspiration
4205
4206
4210
4212
4218
4220
4228

CA Series



Brilliance
5400
5500
6160
6180
6199
6699

CB Series



Curvy

5625
8763
8767
8770
8780
Athena 2009

One/160

Singer One
Singer One Plus
70
8768

Cosmo/Confidence

S800	7469
5625	7469Q
7256	7470
7256 HC	7563
7258	
7285Q Patchwork	
7410	
7412	
7422	
7424	
7426	
7430	
7436	
7442	
7444	
7446	
7448	
7462	
7463	
7464	
7466	
7465	
7467	
7467S	
7468	

CC Series



9900

Quantum 9910
Quantum 9920
Quantum 9940
Quantum 9960
9985 Quantum Stylist Touch
9980 Quantum Stylist
9970

CD Series



IEF RANGE

C240

EB Series



Superb / Legacy

EM200
SE300
SE340
C440Q
C440

EC Series



Futura

CE100
CE150
CE180
CE200
CE250
CE350

SES1000
SES2000

CE Series



Computerized

2010
7140
ET-1
Futura 4060
H74
Stylist 9100
9340
9100 Professional

EA Series



Futura

FQ-4	XL400
SEQS-6000	XL420
SEQS-6700	XL550
5 Futura Quintet	XL580
8500Q Modern Quilter	

SA Series



14CG/14ET/14HD/14SH

14CG-754
14ET-754
14SH-644
14SH-654
14SH-744
14SH-754
14SH-764
14HD854

SB Series



14J

14J250
14J334

SC Series



14T

14T957DC
14T967DC
14T968DC
14T970C

Utility Garment Sewing

UNIVERSAL SHANK

#250033996

M/C Code: MA, MB, MC, CA, CB, CC, CE, EA, EB, EC

This presser foot adapter allows you to use many different types of snap on feet that are available today. The quick release lever at rear allows the snap on foot to drop right off so that another foot can be attached.

1. Unscrew the presser foot and shank.
2. Attach the Presser Foot Holder with the screw provided with the machine.
3. Snap on the appropriate presser foot required for the type of desired stitching.



ALL-PURPOSE FOOT

#416128401

M/C Code: MA, MB

The All Purpose Presser Foot is used for general sewing on most types of fabric. It has a wide needle opening that allows for sewing of stitches up to 7mm in width or straight stitching with the needle in various positions. The underside is flat to hold the fabric firmly in place. It can also be used for elastic insertion and mending.

1. Snap on the All Purpose Presser Foot.
2. Select desired stitch and needle position and sew.

#270076251

M/C Code: CA, CB, EA, EC



BLIND HEM FOOT

#250034196

M/C Code: MA, MB, MC*

The Blind Hem Foot allows you to professionally finish your projects with a machine hem that is undetectable from the right side. Use it to hem pants, dresses, skirts, curtains, etc.

1. Snap on the Blind Hem Foot.
2. Set machine for Blind Hem Stitch or Stretch Blind Hem Stitch.
3. Finish edge of hem. Then fold up and press.
4. Turn back to create a fold about ¼" from the top edge of hem.
5. Position the hem under the foot so that the fold is against the guide in the center. Turn the knob on the right side of the foot to adjust the guide so that widest zigzag stitch of the Blind Hem Stitch catches only 1 or 2 threads of the fabric fold.



*Models 4208 & 4212 require the optional universal shank part #250033996

#250034296

M/C Code: MB, CA, CB, CC, CE, EA, EB, EC

SIDE CUTTER ATTACHMENT

#250035896

M/C Code: MA, MC*

The Side Cutter Attachment is sometimes called a Cut and Hem Foot because it simultaneously hems and trims the fabric while you sew a seam. Similar to a serger, it has a blade to trim the fabric at the same time it sews a seam and finishes it. The Side Cutter gives garments a professional finish.

1. Position the Side Cutter Attachment with the forked arm over the needle screw post and the shank on the presser foot bar.
2. Secure the attachment. Remove the clear guard/cover.
3. Clip about 1" into the fabric that is to be cut off.
4. Select the desired stitch (usually zigzag or overcast).
5. Check the stitch width to be certain that the needle doesn't hit the stitch finger.
6. Position the fabric with the clipped edge against the blade and sew. The stitch finger keeps the stitching flat and smooth.



Note: The machine tension and stitch length and width may need to be adjusted depending on the fabric.

ZIPPER FOOT

#416128701

M/C Code: MA, MB, MC*, CA, CB, CC, CE, EA, EB, EC

In addition to applying zippers, the Zipper Foot can be used to insert piping or sew along areas that may have more bulk on one side than the other. This foot attaches to the right or left of the needle. It has grooves underneath on each side to accommodate the zipper tape or bulky area.

To sew a centered zipper:

1. Baste the seam where the zipper will be inserted. Permanently stitch the remainder of the seam. Press open.
2. Position the zipper face down and unzipped, with the coil aligned to the right of the seam.
3. Snap the zipper foot to the machine into the left groove, stitch the right side of the zipper tape to the seam allowance only, from top to bottom.
4. Close the zipper keeping the zipper flat. Position the left side of the zipper on the left seam allowance.
5. Snap the zipper foot to the machine into the right groove and stitch along the left side of the zipper tape on the seam allowance only.
6. Spread seam allowances flat against the outer garment.
7. With the garment right side up, mark the bottom stop of the zipper with a pin. Hand baste through the three layers as a guide, if desired.
8. Machine stitch through all three layers from top to bottom, pivoting at the bottom and stitching to the basted seam. Re-position zipper foot to the left groove and repeat for the other side.
9. Remove the machine basting from the seam allowance to open the seam.

To sew a lapped zipper:

1. Baste the seam where the zipper will be inserted. Permanently stitch the remainder of the seam. Press open.
2. Position the open zipper face down, with the coil aligned to the left of the seam.
3. Snap the zipper foot to the right groove, stitch the left side of the zipper tape to the seam allowance only, from top to bottom.
4. Close zipper and turn face up, forming a fold of fabric between zipper coil and basted seam.
5. Re-position the zipper foot to the left groove and stitch close to the edge of the fold from top to bottom.
6. Spread the garment flat, with the zipper face down on the seam allowances.
7. On face side of fabric, mark bottom of zipper stop with pin. Hand baste on the left side of the zipper tape, if desired.
8. With the basting as a guide and the zipper foot in the right groove, stitch from top to bottom. Pivot at the bottom and stitch to the seam.
9. Remove machine basting thread from the seam allowance to open the seam.

*Models 4208 & 4212 require the optional universal shank part #250033996

INVISIBLE ZIPPER FOOT

#250035396

M/C Code: MA, MC*, CB, CC, EC

The Invisible Zipper Foot is used in applying a completely concealed closure in garments and home décor items—no stitching is visible on the outside of the fabric. The foot has a needle hole in the center and two grooves underneath to accommodate the zipper coils. Unlike a regular zipper, an invisible zipper is inserted before any part of the seam is stitched.

1. Open zipper and position the right side of the zipper face down on the right side of the garment. The zipper coil will be aligned on the stitching line with the tape part in the seam allowance.
2. Snap on the invisible zipper foot and position the zipper coil in the groove on the right side of the foot.
3. Stitch from the top of the seam until the zipper foot hits the pull tab at the bottom and backstitch. (Do not stretch the fabric.)
4. Position the other side of the open zipper face down on the left side. The zipper coil will be aligned on the stitching line with the tape part in the seam allowance.
5. The zipper coil will be positioned in the groove on the left side of the foot.
6. Stitch from the top of the seam until the zipper foot hits the pull tab at the bottom and backstitch. (Do not stretch the fabric.)
7. Close the zipper.
8. Replace invisible zipper foot with regular zipper foot and stitch the remainder of the seam.
9. At the lower edge of the zipper, stitch each side of the zipper tape flat to the seam allowances only.



Note: If the garment has a horizontal seam or design in the fabric that needs to match, be sure to align and pin or baste the zipper before stitching.

#250040996

M/C Code: CD

**Models 4208 and 4212 require the optional universal shank part #250033996*



MANUAL BUTTONHOLE FOOT

#250035496

M/C Code: MA, MB, CB

Sewing a 4-step buttonhole is as easy as 1-2-3 and 4! Just mark, sew, and cut. It is recommended that you use a fabric interfacing between fabric layers and a temporary stabilizer under the fabric so that the fabric and stitches have good support and don't pucker. Check your instruction manual for specific details on your machine model.

1. Snap on the 4-step Buttonhole Foot.
2. Mark the length and position of the desired buttonhole on your fabric with a marking pencil.
3. Using the Stitch Selector Guide on the machine and adjusting the setting through steps one to four, the buttonhole will be completed.
4. The steps include stitching bartacks at the front and back of the buttonhole and up/down each side.
5. Knot the threads when the buttonhole is complete.
6. Carefully cut open the buttonholes.
7. Note: Always do a sample on the exact fabric first.



Note: Depending on the specific machine model, the sequence of steps can vary.

SEW-ON BUTTON FOOT

#250035496

M/C Code: MA, MB, CB

The Sew-On Button Foot holds buttons in position while attaching them with the sewing machine. This saves time while securely sewing the buttons onto the fabric. This foot can also be used to sew on hook and eye closures.

1. Depending on your machine model, adjust the drop feed lever or attach the feed dog cover plate.
2. Snap-on the Sew-On Button Foot.
3. Position the button under the foot – the holes of the button should be in the blue open area of the foot. This area has a textured rubberized coating that holds the button in position.
4. Set the machine for either a Button Sew Stitch or a Zigzag Stitch on 0 length setting.
5. Slowly turn the handwheel towards you to be certain that the needle inserts in the middle of the each hole of the button. The stitch width may need to be adjusted until the needle clears the holes.
6. Make 6-8 stitches then knot by changing to the straight stitch at 0 length for 3-4 stitches, first checking to be certain that the needle clears the hole.
7. If using a four hole button, re-position the button and repeat Step 6.



Note: If a shank is needed to allow for ease of buttoning, position a straight pin or toothpick under the button before stitching.

OVERCASTING FOOT


#250035896

M/C Code: MA, MC*



The Overcasting Foot is used to keep the fabric edges from curling up when you overlock or zigzag stitch the edge to prevent raveling. The metal bar in the center of the foot holds the fabric flat as the thread wraps over the edge for a serged effect.

1. Snap on the Overcasting Foot.
2. Place fabric under the foot with the edge aligned against the guide on the right side.
3. Select overlock, zigzag or other desired stitch.
4. Adjust length. Adjust width so that the needle doesn't hit the bar in the center of the opening in the foot.
5. Sew, keeping fabric edge aligned against the guide on the foot.

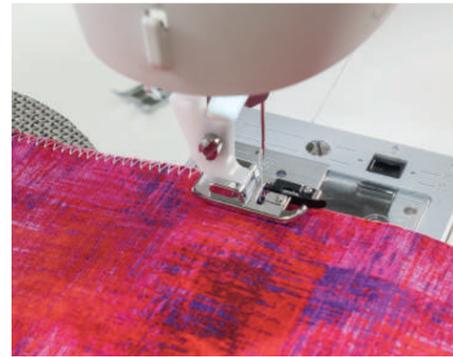

*Models 4208 and 4212 require the optional universal shank part #250033996

#250035996

M/C Code: MA, MB, CA, CB, CC, EA, EB, EC

GATHERING FOOT

#250035296

M/C Code: MA, MB, MC, CA, CB, CC, CE, EA, EB, EC




The Gathering Foot is used to form gathers in fabric. It can gather a single fabric or gather and attach to a second flat fabric simultaneously. It works best on light to medium weight fabrics. The foot has a large needle opening to allow for various needle positions and a slot that opens the left.

To gather a single layer of fabric:


1. Attach the Gathering Foot securely.
2. Place the fabric under the foot and sew.
3. For a wider seam allowance, move the needle to the left.

To gather and attach a second flat fabric simultaneously:

1. Attach the Gathering Foot securely.
2. Place the fabric to be gathered under the Gathering Foot right side up.
3. Place the fabric that will attach to the gathered fabric into the slot from the left side opening with the right side down.
4. Sew, keeping the two layers of fabric aligned, but not holding them to prevent them from feeding while stitching together.

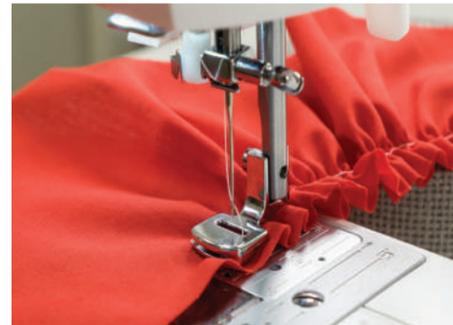

Note: A longer stitch length and tighter tension will produce fuller gathers.

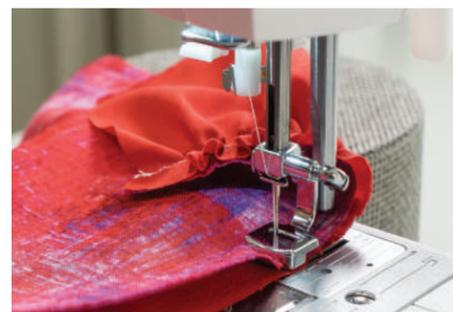

ROLLED HEM FOOT

#416283901

M/C Code: MA, MB, MC*, CA, CB, CC, CE, EA, EC



The Rolled Hem Foot rolls the fabric to enclose the raw edge while sewing. It works best with very light to medium weight fabrics. This foot allows for quickly sewing professional finished edges for ruffles, scarves, napkins, etc.

1. Snap on Rolled Hem Foot.
2. Fold and press a double hem the width of the finished hem on the underside of the fabric – about 1-1½”.
3. Place under the presser foot and stitch a few stitches along the folded hem.
4. Stop with the needle in the fabric, raise the presser foot and position the folded hem into the funnel or scroll portion of the foot.
5. Lower the Rolled Hem Foot and continue to sew, holding the fabric vertically - the funnel or scroll will “roll” the fabric to form the hem.

Models 4208 and 4212 require the optional universal shank part #250033996



Note: The Rolled Hem Foot can also be used for couching yarn or decorative threads. Feed the end of the yarn through the funnel and into the groove under the foot. Set the machine for a zigzag or decorative stitch, adjusting the length and width as desired.

NON-STICK FOOT

#250035696

M/C Code: MA, MB, MC*, CA, CB, CC, CE, EA, EB, EC




The Non-Stick Foot is sometimes called a Teflon Foot. It is used to sew specialty fabrics such as leather, plastic, vinyl and oilcloth. The slick surface on the underside of the Non-Stick Foot allows these fabrics to glide smoothly under the foot.

1. Snap on Non-Stick Foot.
2. Select the desired stitch.
3. Adjust length.
4. If fabrics need to be pinned together, do so in the seam allowance so that unwanted pinholes are not created from the straight pins or use paper clips.
5. After stitching, use a cool iron and pressing cloth to press seams.

*Models 4208 and 4212 require the optional universal shank part #250033996

#250041396

M/C Code: CD

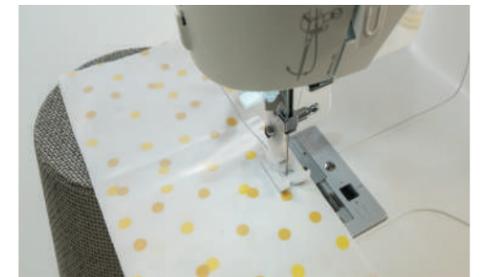

Note: When sewing these difficult fabrics, frequently the stitch length should be increased to avoid perforations in the seamline.



ROLLER FOOT

#270076292

M/C Code: MA, MB, MC*, CA, CB, CC, CE, EA, EC

The Roller Foot is used to sew thicker fabrics, heavy knits and textured or napped fabrics. It can also be used for sewing leather, vinyl or plastic. This presser foot has a longer roller in the front and a set of smaller rollers in the back, for even fabric feeding.

1. Snap the Roller Foot onto the machine.
2. Select the desired stitch.
3. Adjust length.
4. If leather vinyl or plastic fabrics need to be pinned together, do so in the seam allowance so that unwanted pinholes are not created from the straight pins or use paper clips.
5. After stitching, use a cool iron and pressing cloth to press seams.

*Models 4208 and 4212 require the optional universal shank part #250033996



Note: When sewing these specialty fabrics, frequently the stitch length should be increased to avoid perforations in the fabrics.

PIPING FOOT

#250041596

M/C Code: CD

The Piping Foot is used to insert packaged piping into seams and edges for a tailored finish. For specialty piping, cord can be covered with fabric. The clear view allows you to see your stitching and piping placement and to see the first row of stitching and adjust your needle position appropriately to stitch next to the original row.

1. Snap the Piping Foot onto the machine.
2. Select the straight stitch with average stitch length.
3. Position one layer of fabric face side up, place piping on top and the other layer of fabric face down.
4. Check that all three layers are aligned with the edges even on the right side of the foot and the piping in the groove of the foot.
5. Sew a few stitches to check the stitch placement. The needle position may need to be adjusted to ensure the stitching is butted against the cord in the piping.

To Make Custom Piping:

1. Snap the Piping Foot onto the machine.
2. Select the straight stitch with average stitch length.
3. Position the cording into the center of the bias fabric strip with the face side out.
4. Place under the Piping Foot with the fold and cording to the left and the raw edges to the right.
5. Sew a few stitches to check the stitch placement. The needle position may need to be adjusted to ensure the stitching is butted against the cord in the piping.



Decorative & Crafting Sewing

SATIN STITCH FOOT

#416128301

M/C Code: MA, MB, MC*

The Satin Stitch Foot is also called an appliqué or special purpose foot. It is used for sewing decorative stitching, appliqué, and other surface embellishments on projects. This foot has a tunnel on the underside to allow the stitched fabric to pass smoothly underneath.

1. Snap the Satin Stitch Foot onto the machine.
2. Prepare fabric and appliqué. Add tear-away interfacing under fabric to reinforce area where appliqué or decorative stitching will be sewn.
3. Slightly loosen the top tension.
4. Select the desired stitch. Zigzag stitches are most often used for appliqué.
5. Position fabric with appliqué under the Satin Stitch Foot.
6. Adjust stitch length—stitches should be close together, but not stacking.
7. Adjust stitch width—stitches should cover the raw edge of the appliqué.
8. Stitch around the entire appliqué completely covering the raw edges.

*Models 4208 and 4212 require the optional universal shank part # 250033996

#250036696

M/C Code: CB, CC, EB



Note: Metallic, tweed or other decorative threads may be used on the top of the machine. Keep all purpose thread on the bobbin.

CLEAR OPEN TOE FOOT

#250035796

M/C Code: MA, MB, CA, CB, CC

The Clear Open Toe Foot is perfect for appliqué, decorative stitching and surface embellishments such as applying trims. It provides an unobstructed view of the stitching while sewing since there is no bridge between the toes. There is also a groove on the underside of the foot to allow the stitching or embellishment to pass smoothly.

1. Snap on the Clear Open Toe Foot.
2. Select zigzag or decorative stitch.
3. Adjust stitch length and width as desired.

#270 386023050

M/C Code: MA, MB, CA, CB, CC, EA, EB

#250040796

M/C Code: CD



Note: To align several rows of stitching, draw guide lines with a marking pen. Use a stabilizer under the fabric to prevent puckering.

CORDING FOOT

#250034596

M/C Code: MA, MC

With the Cording Foot, surface embellishment can be added to fabrics with decorative cords, threads, or thin yarns. The grooves in the foot keep the cords parallel and flat while guiding them back through to the groove under the presser foot as they are stitched to your fabric. This foot may also be used for shirring and gathering.

1. Snap the Cording Foot onto the sewing machine.
2. Select a zigzag or decorative stitch. Adjust the width to stitch over the cords. The selected stitch should use forward motion, avoid backward motion stitches.
3. Slide the cords from the right, under the guides and into position in the grooves.
4. Pull the cords into the open slot behind the guides. Pull to the back and under the foot. Check that the cords are flat and parallel. Tie them together behind the foot to keep them in place.
5. Place your fabric underneath the Cording Foot and sew. A stabilizer may be needed to keep the fabric flat and smooth.

#250034696

M/C Code: MB, CA, CB, CC



PINTUCK FOOT

#250036096

M/C Code: MC*, CB, CC, EA, EC

The Pintuck Foot is used for heirloom sewing, embellishing garments, table linens and bed linens. Generally, this foot is used with a twin needle (SINGER® Style 2025) to create evenly-spaced raised tucks in the fabric. It works best with very fine to medium weight fabrics. A series of grooves on the underside of the foot keep the tucks from being flattened and serves as guides for stitching parallel rows of tucks.

1. Snap on the Pintuck Foot.
2. Insert a narrow twin needle.
3. Thread the machine with two spools of thread.
4. Increase the top thread tension.
5. Set the machine for a straight stitch.
6. Using a marking tool, mark the first row of stitching (can be straight or wavy).
7. Position the fabric under the foot aligning the marking with the center of the foot and stitch the first tuck.
8. To stitch the second tuck, position the first tuck into one of the other grooves. Which groove used will determine the spacing of the tucks.

*Models 4208 and 4212 require the optional universal shank part #250033996



Note: A contrasting thread will produce a more pronounced tuck.



Twin Needle Style 2025
#D043090 (4mm size 90 regular point)
#D07419 (4mm stretch)

BEADING FOOT

#250041296

M/C Code: CD



Use the Beading Foot to easily sew beads, cords, yarns, sequins or other trims into place. The deep groove on the underside of the foot will allow piping or beads to be easily stitched into place.

1. Snap the Beading Foot onto the machine.
2. Thread the top of the machine with clear monofilament thread and regular sewing thread in the bobbin.
3. Select zigzag stitch.
4. Position the beads or other trim into the groove of the foot. This will guide the trim as it is stitched.
5. Place fabric under the Beading Foot. Trims may be stitched on the edge or anywhere on the fabric.
6. Adjust zigzag width to accommodate the width of the trim. Turn the handwheel to permit the needle to go left and right to test that the needle will clear the trim and not break.
7. Sew slowly.



EDGE JOINING FOOT


#250040896

M/C Code: CD



The Edge Joining Foot is used to sew two pieces of fabric, lace or trim together side by side. It can also be used for stitching in the ditch, edge stitching, and Hong Kong finishes. The vertical guide in the center of the foot assures that your stitching stays perfectly straight.

1. Snap the Edge Joining Foot onto the machine.
2. Position fabrics or trims against each side of the center guide.
3. Select zigzag, feather, multi-stretch zigzag or other desired stitch.
4. Adjust stitch width to catch fabrics on both sides of the center guide on the Edge Joining Foot.
5. Stitch while keeping the fabrics or trims aligned against the center guide.

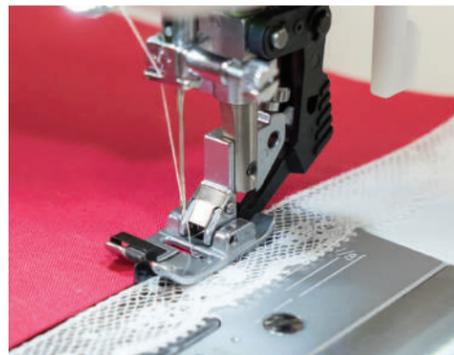

Note: It is easier to use lace or trims with a flat header.

MULTI-LINE SEWING FOOT


#250040496

M/C Code: CD



The Multi-Line Sewing Foot is used to create evenly spaced rows of decorative stitches or as a guide when sewing stitches that have sideways motion. Guidelines are also marked to ensure accuracy when turning corners.

1. Snap on the Multi-Line Sewing Foot.
2. Thread the machine. Decorative threads may be used for the upper threading.
3. Select a decorative stitch.
4. Use a fabric marking pen to draw a line to indicate the center of the stitching.
5. Place the fabric with stabilizer under the Multi-Line Sewing Foot, aligning the drawn line with the center marking on the foot.
6. Sew the first row of stitching.
7. Re-position the fabric to the left or right using the red lines on the foot to determine the desired distance between rows of stitching.
8. Stitch subsequent rows using the red lines on the foot as a guide while stitching.

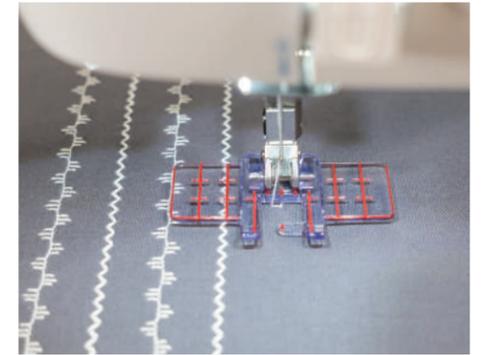


Note: When sewing decorative stitches that have sideways motion, keep the drawn line and the red lines on the presser foot parallel to each other while stitching.

COUCHING FOOT


#250041496

 M/C Code: CD



The Couching Foot is designed to let you sew over cords, yarns, heavy weight threads, or trims to add embellishment to projects. The loop on the front of the foot guides the threads, yarns, or cords while stitching.

1. Position the yarn, cord, or threads through the loop in front of the Couching Foot, into the opening then to the back and into the tunnel on the underside of the foot.
2. Snap the Couching Foot onto the machine.
3. Select zigzag or other stitch.
4. Adjust stitch width to cover the yarn, cord, or threads.
5. Position a scrap fabric under the foot to check the stitching. Adjust as desired.
6. Stitch attaching the trim while sewing.

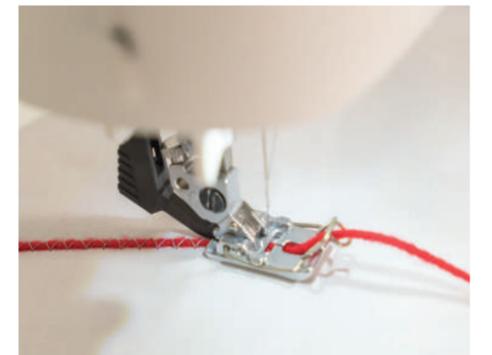

RUFFLER FOOT

#2500270.01

M/C Code: MA, MB, MC, CA, CB, CC, CE, EA, EB, EC

The Ruffler Foot is used to create perfectly spaced pleats and gathers. It can also make pleated or gathered ruffles that are simultaneously stitched to a project.

Parts of the Ruffler:

- a. Ruffler Regulator—determines the frequency of the tucks
 - 1 = every stitch creates a tuck
 - 6 = every 6th stitch creates a tuck
 - 12 = every 12th stitch creates a tuck
 - = no tucks are created
- b. Adjusting Screw or Indicator—determines the depth of the tucks (Settings 0-8, with 0 for the least fullness and 8 for the deepest pleats)
- c. Ruffling Blade—forms the gathers or pleats by pushing the fabric to the needle
- d. Separator Blade—bottom plate of the attachment
- e. Separator Guides—slots to guide the edge of the fabric

To Make a Ruffle or Gather:

1. Remove the regular presser foot and attach the Ruffler Foot - the fork arm goes around the needle screw clamp then attach to the shank with the screw. Secure the screw.
2. Set the machine for a straight stitch.
3. Adjust stitch length. (A shorter stitch length creates pleats that are closer together.)
4. Check that the needle clears the hole in the ruffle attachment.
5. Position the fabric right side up between the ruffling blade and the separator blade and under the first separator guide.
6. Push the ruffling blade towards the needle.
7. Stitch gathers or pleats.

To Make a Ruffle and Attach to Fabric in One Operation:

8. Follow Steps 1-4, and then proceed with Step 9.
9. Position the fabric to be ruffled or gathered, right side down, between the ruffling blade and the separator blade and under the first separator guide.
10. Place the fabric that will remain flat right side up, between the separator blade and the machine feed dogs and under the first separator guide.
11. Push the ruffling blade towards the needle.
12. Lower the presser foot and sew.

#250040596

M/C Code: CD



Note: Always use scraps of the fabric to test the settings before stitching on your project.

FLOWER STITCH FOOT

#2500261.01

M/C Code: MA, MB, MC, CA, CB, CC, CE, EA, EB, EC

With the Flower Stitch Foot beautiful flowers and other circular designs can be created. Use various threads, stitches, size settings or twin needle for unique embellishments.

1. Drop the feed dogs or cover them.
2. Set pressure setting to the highest setting, if applicable.
3. Position the lever of the Flower Stitch Foot onto the needle clamp and attach to the shank with the screw. Tighten securely.
4. The size of the flower can be adjusted with the screw on the presser foot. Loosen the screw and move the setting mark in the center of the foot opening:

Move to + to make a larger flower
Move to - to make a smaller flower

Then tighten the screw.

5. Select the desired stitch. Do not select decorative stitches that utilize backward motion.
6. Adjust stitch width.
7. Pull bobbin thread to the top of the machine.
8. Place the fabric under the attachment where the embellishment is desired.
9. Hold the threads and sew a few stitches. Stop and clip threads. Continue stitching.
10. When the design is complete, lift presser foot and pull out leaving threads long enough to pull to back and knot.



Note: If using a twin needle, set the machine for twin needle or adjust stitch width to 2 or less. Stabilizer may be needed to prevent fabric from puckering.



Quilting



PATCHWORK (QUILTING) FOOT

#270 386005

M/C Code: CB, CC, EA, EC

To stitch a perfect quarter inch seam, just guide the cut edges of your seam allowance along the right side of the 1/4" FOOT. The markings on the sides of the foot indicate pivot points for maintaining width of seams at corners.

1. Snap on the 1/4" Quilting Foot.
2. Select the straight stitch.
3. Align the cut edge of the fabric along the right edge of the foot.
4. Sew to get accurate 1/4" seams.



1/4" PIECING FOOT

#2500267.01

M/C Code: MA, MB, MC*, CA, CB, CC, CE, EA, EC

The 1/4" Piecing Foot is used for sewing perfect 1/4" seam allowances. It can also be used for small projects with narrow seam allowances like baby clothes and doll clothes. The red guide lines on the foot help you accurately pivot corners!

1. Snap on the 1/4" Foot.
2. Select the straight stitch and center needle position.
3. Align the cut edge of the fabric along the right edge of the foot.
4. Sew to get accurate 1/4" seams.

**Models 4208 and 4212 require the optional universal shank part #250033996*

#250041696

M/C Code: CD



STITCH-IN-THE-DITCH FOOT

#250041196

M/C Code: CD



The Stitch-in-the-ditch foot helps to accurately stitch in the seams of pieced quilts, garments and other projects. This foot also has guidelines for turning corners evenly.

1. Snap on the Stitch-in-the-Ditch Foot.
2. Thread the machine with the desired color or monofilament thread on the top and thread to match the underside of the quilt in the bobbin.
3. Select straight stitch with center needle position.
4. Position the layered quilt fabrics with the top of the quilt face up. The guide of the foot should align with the seam (ditch) of the quilt.
5. Stitch-in-the-ditch of the quilt seams as desired while keeping the fabric along the guide of the foot.



FREE MOTION / DARNING FOOT

#250034896

M/C Code: MA, MB, MC*, CA, CB, CC, CE, EA,EB, EC



The Free Motion/Darning Foot gives better visibility around the foot when free motion quilting. The closed toe helps prevent threads or fabrics from getting stuck in the foot, especially when stitching on lace-type fabrics.

1. Remove the presser foot and the presser foot ankle.
2. Drop or cover the feed dogs.
3. Attach the Free Motion Foot being certain that the metal arm is on the needle clamp. Tighten the screw securely.
4. Select a straight stitch and center needle position. Stitch length will not matter since it will be determined by the movement of the fabric.
5. Position the fabric under the presser foot and bring the bobbin thread to the top.
6. Holding both threads, begin stitching moving the fabric in a smooth motion with a consistent speed.



Note: This foot also is used to stitch free hand monograms and other designs by selecting the zigzag stitch.

**Does not fit the 4210, 4212 and 4220*

CLEAR OPEN TOE FREE-MOTION

#250041096

M/C Code: CD



The Clear Open Toe Free-Motion Foot provides an unobstructed view for free motion sewing or stippling around pieced quilts or embroidered designs.

1. Snap on the Clear Open Toe Free Motion Foot.
2. Drop the feed dogs or cover them.
3. Thread the machine and bobbin.
4. Select straight stitch. Stitch length will not matter since it will be determined by the movement of the fabric.
5. Practice sewing on a fabric scrap to get the feel for moving the fabric smoothly.
6. Begin stitching on the project. To start and end stitching, take several stitches without moving the fabric to lock the stitching.



EVEN FEED FOOT

#250035096

M/C Code: ALL MODELS (except CD)



The Even Feed Foot, also known as a walking foot makes it much easier to match plaids or stripes, sew several fabric layers such as quilting, sewing napped or slippery fabrics. This foot has its own set of feed dogs that work in conjunction with the machines feed dogs to improve the flow of the fabric. The Even Feed Foot securely grips the top layer or layers of fabric while your sewing machine feeds the fabric from below. Plaids, stripes, and quilt layers stay perfectly aligned and leathers, suedes, vinyls and other problematic fabrics flow easily through your machine.

1. Remove the presser foot and presser foot ankle.
2. Position the arm of the Walking Foot over the needle clamp screw and attach to the shank of the machine with the screw. Tighten securely.

Note: As the needle goes up and down, the feed dogs also move up and down, thus pulling the upper layer of fabric evenly along with the lower fabric.

3. Select the straight, zigzag, or other desired stitch. Do not select stitches with many backward stitches.
4. Place fabrics under the Even Feed Foot and stitch.



QUILTING GUIDE ATTACHMENT

#6008001

M/C Code: ALL MODELS

The Quilting Guide Attachment or Edge Guide is used to stitch evenly-spaced rows for quilting, topstitching, space between tucks, etc. It works with presser feet that have an accessory hole in the back of the presser foot shank.

1. Attach presser foot with accessory hole in the back.
2. Insert the longer arm of the Quilting Guide Attachment into the hole.
3. Position the guide to the desired width – measure from the needle and slide to adjust.
4. Stitch consecutive, evenly spaced rows.




LEGACY EXTENSION TABLE

#250032496

M/C Code: EB

The Large Extension Table provides a stable, level surface for sewing larger projects such as quilts. It has a ruler at the front for a quick reference or guide.

1. Simply take off the removable storage compartment to access the machine's free arm
2. Slide the Large Extension Table onto the machine.

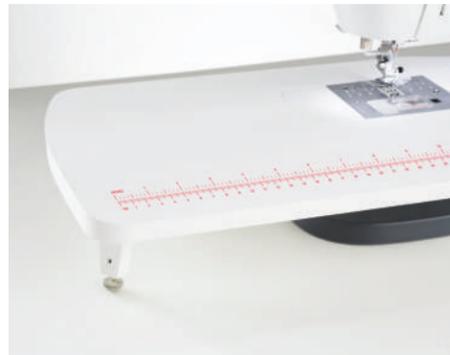

FEATHERWEIGHT EXTENSION TABLE

#250033296

M/C Code: CD

The Featherweight Extension Table is perfect for sewing large projects or for quilting. It has a ruler at the front for a quick reference or guide and the adjustable-height legs provide added stability. Table Measurement (Inches): 15.75 L X 10.13 W X 1.25 H

1. Simply take off the removable storage compartment to access the machine's free arm
2. Slide the Extension Table onto the machine.
3. Adjust the height of the legs as needed to provide an extended sewing surface level with the machine.



Embroidery

ENDLESS EMBROIDERY HOOP

#250031796

M/C Code: EB

The Endless Hoop makes it very simple to create borders for garments and home decorator projects. The hoop size is 7" x 4" (180mm x 100 mm) and includes six border designs.

1. Place the fabric and stabilizer into the hoop.
2. Line up the fabric with the guide on the right side of the hoop.
3. Snap the clamp in place to secure your fabric in the hoop.
4. When the embroidery is completed, a jump (alignment) stitch marks the matching point for perfect placement of the next embroidery.
5. Unsnap the clamp to release the fabric and stabilizer.
6. Slide the fabric and stabilizer forward and align the needle with the jump stitch.
7. Make sure that the fabric is lined up with the guide on the right side of the hoop.
8. Snap the clamp back in place and continue to embroider.



5" X 7" EMBROIDERY HOOP

#250031696

M/C Code: EB

Many commercial embroidery designs are designated as 5" x 7" in size, making this hoop perfect to use when embroidering these designs. It holds your fabric taut and permits precise placement of your 5" x 7" design. It also eliminates the use of excess stabilizer when using a larger hoop than needed. Six free downloadable 5" x 7" embroidery designs are included.

1. Loosen the screw on the hoop and remove the inner section of the hoop.
2. Place the fabric and stabilizer onto the outer part of the hoop.
3. Position the inner section of the hoop over the fabric and stabilizer and press down so that the inner hoop slips into the outer hoop..
4. Tighten the screw. Pull the fabric until smooth and taut.
5. Position the hoop onto the machine and begin embroidery.



Additional Accessories

BOBBINS

#006084009

M/C Code: MA, MB, CC, CD, EB

Plastic class 15



BOBBINS

#85128-BLS

M/C Code: CB, EA

10 pack of plastic class 15J



SEAM RIPPER / BRUSH

#85365

M/C Code: ALL MODELS

 
Use this brush to clean lint and threads from the machine.



SCREWDRIVER FOR NEEDLE PLATE

#68000177

M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC



SCREWDRIVER (SMALL)

#161295-452-BLS

M/C Code: ALL MODELS



Overlock Sewing and Embellishment

ELASTIC FOOT

#270 550621

M/C Code: SA

The Elastic Foot is used for stretching and attaching elastic to a project. The amount of stretch can be adjusted easily. The foot can also be used to attach a stay tape to a seam to prevent stretching.

Setting up the Serger:

Needles: One or two

Stitch Type: Three-thread overlock or four-thread ultra stretch mock safety stitch

Stitch Length: 4

Differential Feed: Normal

Upper Knife: Engaged or disengaged

1. Loosen the screw and pull the guide to the left.
2. Insert the elastic through the opening and pull to the back of the foot.
3. Re-position the guide and tighten the screw.
4. Snap the Elastic Foot to the machine.
5. Adjust the amount of stretch desired with the adjusting screw on the top of the foot.
6. Position the fabric wrong side up under the foot to the desired position.
7. Sew while lightly pulling the elastic to the back of the machine. Be careful not to cut the elastic while stitching.



Note: If desired, the stitched elastic can be stretched, turned down and stitched with a regular sewing machine using a straight stretch or multi-stretch zigzag stitch.

BLIND HEM FOOT

#270 550623

M/C Code: SA

The Blind Hem Foot stitches the hem, overcasts the edge and trims all in one step. The stitching occurs on the wrong side of the fabric, and the stitches barely catch the right side of the fabric.

Setting up the Serger:

Needle: Right needle

Stitch Type: Three-thread overlock

Stitch Length: 3 - 4

Differential Feed: Normal

Upper Knife: Engaged

1. Snap on the Blind Hem Foot.
2. Fold up the hem. Press
3. Turn the hem back against the right side of fabric, leaving about 1/4" of the hem exposed.
4. Position the fold of the hem against the guide of the foot.
5. The position of the guide can be adjusted by loosening the screw, moving the guide, and then re-tightening the screw.
6. Sew, guiding the fabric so that the stitching just catches the folded edge.



Note: On a scrap of the fabric, test the stitching to make certain that the stitching is catching just the edge of the fold before hemming the project.

GATHERING FOOT

#270 550620

M/C Code: SA



The Gathering Foot is used to form gathers in fabric. It can gather a single fabric or gather and attach to a second flat fabric simultaneously. It works best on light to medium weight fabrics.

Setting up the Serger:

Needles: Two or one
 Stitch Type: Three or four-thread overlock
 Stitch Length: Longer Stitch
 Differential Feed: Higher Setting
 Upper Knife: Engaged

To gather a single layer of fabric:

1. Snap the Gathering Foot onto the machine.
2. Position the fabric under the foot from the left side.
3. Lower the presser foot and sew.

To gather and attach a second flat fabric simultaneously:

1. Snap the Gathering Foot onto the machine.
2. The width of the seam allowance can be adjusted by loosening the screw on the front of the foot, sliding the guide to the desired position, then re-tightening the screw.
3. Place the fabric to be gathered right side up, between the Gathering Foot and the needle plate.
4. Place the fabric that will NOT be gathered into the opening of the foot with the right side down.
5. Lower the presser foot and sew. Keep the two layers of fabric aligned to the guide on the right of the foot. Let them feed together while gathering and stitching together.



Note: A longer stitch length, tighter tension and increasing the differential feed will produce fuller gathers.



LACE FOOT

#270 550769

M/C Code: SA



The Lace Foot makes it easy to serge lace and delicate trims together or onto fabric without damaging the header. The adjustable guide of the foot ensures that the stitching will be accurate as well as ensure that your lace stays intact.

Setting up the Serger:

Needle: Right needle
 Stitch Type: Three-thread overlock
 Stitch Length: 2-4
 Differential Feed: Normal
 Upper Knife: Engaged

1. Snap on the Lace Foot.
2. Position the fabric right side up under the presser foot so that desired amount will be cut off.
3. Place lace right side down on top of the guide with the header against it.
4. The position of the guide can be adjusted with the screw on top of the foot. (Loosen the screw, adjust guide to desired position then tighten screw.)

The lace foot can also be used to topstitch ribbon onto fabric:

1. Disengage the knife.
2. Set the serger for a narrow flatlock stitch.
3. Align the ribbon along the guide so that the needles are centered on the ribbon.
4. Sew.



Note: If the fabric doesn't need to be trimmed, place both fabric and lace on top of the guide. Disengage the knife. Adjust guide as needed and stitch.

BEADING FOOT

#270 550624

M/C Code: SA



The Beading Foot is used to apply beads, pearls, sequins or other trims to projects. It can also be used with a rolled hem stitch to make wire-edge ribbon for craft and home dec projects.

Setting up the Serger:

Needle: Right or left needle
 Stitch Type: Three-thread overlock
 Stitch Length: 2-4
 Differential Feed: Normal
 Upper Knife: Engaged or disengaged

1. Snap the Beading Foot onto the machine.
2. Position the beads into the guide at the front of the foot and under the tunnel at the back.
3. Take 2-3 stitches to hold the beads in place.
4. Place fabric under the foot at desired position depending on if the fabric is to be trimmed or not. (Knife will be engaged or disengaged.)
5. Sew, keeping the beads in the guide.



Note: If applying sequins, be certain that the sequins overlap forward or they may cause the stitching to jam.

PIPING FOOT

#270 550622

M/C Code: SA



The Piping Foot is sometimes called a Cording Foot. It is used to cover cording to make piping or for inserting piping into seams. The groove in the bottom of the foot guides the cording or piping while stitching.

Setting up the Serger:

Needle: One or two
 Stitch Type: Three or four-thread overlock stitch
 Stitch Length: 3-5 mm
 Differential Feed: Normal
 Upper Knife: Engaged or disengaged

To make piping:

1. Cut bias strips wide enough to cover the cording and seam allowances.
2. Fold fabric (wrong sides together) and position the cord inside the fold.
3. Snap the Piping Foot onto the machine.
4. Place the fabric with the cord under the Piping Foot making sure that the cord is in the groove on the underside of the foot while sewing.



Note: Depending on the width of the seam allowance desired, the knife will be engaged to trim the fabric or not engaged so that the seam allowance will not be trimmed.

To stitch piping into a seam:

1. Snap on the Piping Foot.
2. Place fabric (right side up), piping, and then the second layer of fabric (right side down) under the presser foot with the piping positioned in the groove of the foot.
3. Sew, keeping the piping in the groove of the foot.



Notions (Needles, Scissors & Dress Forms)

UNIVERSAL NEEDLE

D4715 SIZE 81/11 - 4 COUNT
 D4723 SIZE 90/14 - 4 COUNT
 D4766 ASSORTED: SIZE 80/11 (2), 90/14 (2), 100/16 (1)
 M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Universal or regular point needles have a slightly rounded sharp point and are used for all woven fabrics like cotton, linen and silk. They come in a variety of sizes suitable for different types and weights of fabrics.



BALL POINT NEEDLE

D4847 ASSORTED: SIZE 70/09 & 80/11 - 4 COUNT
 M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Ball point needles have a rounder tip that separates the fabric yarns while stitching. It is used for knit and tricot fabrics.



OVERLOCK / SERGER NEEDLE

D04803 ASSORTED: SIZE 80/11, 90/14, 100/16 - 5 COUNT
 M/C Code: SA, SB, SC

Serger/Overlock needles are for use with serger or overlock machines. If your serger recommends a Style 2022 needle, you can use these needles.



HEAVY DUTY NEEDLE

D4758 Size 110/18 - 3 COUNT
M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Heavy duty needles are used for sewing heavy fabrics, such as canvas and upholstery. We recommend a slightly longer stitch length when sewing heavy fabrics.



DENIM NEEDLE

D2108 SIZE 100/16 - 3 COUNT
M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Denim needles have a sharp point for use when sewing denim and jeans. They are also practical when sewing canvas.



MICROTEX NEEDLE

D04712 SIZE 90/14 - 5 COUNT
D04708 SIZE 60, 70 & 80 - 5 COUNT
M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC


Microtex needles have a very sharp point and are perfect for microfibers and other synthetic fabrics. They are available in small sizes for lightweight tightly woven fabrics.



TOPSTITCH NEEDLE

D04725 SIZE 100/16 - 5 COUNT
M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC


Topstitch needles have a larger eye and groove to accommodate the use of heavier decorative threads for embellishment.

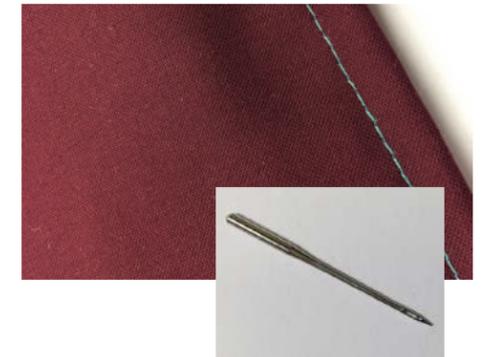

LEATHER NEEDLE

D2087 SIZE 90/14 & 100/16 - 3 COUNT
M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Leather needles have a wedge point for sewing leather or vinyl.

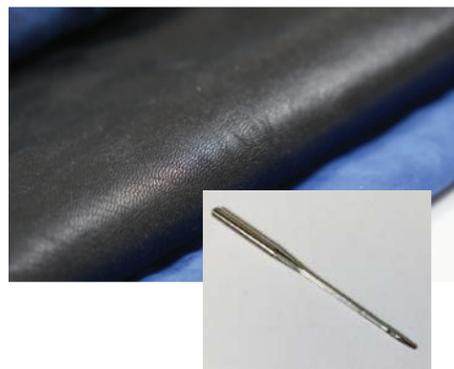

EMBROIDERY NEEDLE

D04727 SIZE 80 - 5 COUNT
D04728 SIZE 90 - 5 COUNT
M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Embroidery needles are specially designed for use with special threads for embroidery and decorative sewing.



TWIN NEEDLE

D04309 UNIVERSAL SIZE 90- 4MM – 1 COUNT
 D04719 STRETCH 4MM – 1 COUNT
 M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Twin needles have two needles joined together on one shank. They are used to sew two parallel rows of stitching simultaneously. The “MM” designation refers to the metric distance between the two joined needles. These can be used for creating pin tucks, as well as parallel decorative stitching. Be sure to set the stitch width to an appropriate width before starting to stitch.



WING NEEDLE

D04811 SIZE 100 – 2 COUNT
 M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Wing needles have “wings” on each side of the needle that creates small holes while stitching. Use with natural fibers for best results. Use these needles when creating heirloom stitches on batiste or lightweight linens.



METALLIC NEEDLE

D04804 SIZE 90 – 5 COUNT
 M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Metallic needles have a longer eye for use with metallic or other decorative threads.



TITANIUM NEEDLE

DU04806 REGULAR & BALL POINT: SIZE 80/11 & 90/14 – 8 COUNT
 D04810 QUILTING: SIZE 80/11 & 90/14
 M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

Titanium needles are coated to help them stay sharper longer. They have excellent abrasion resistance and will last much longer.



MISCELLANEOUS NEEDLE

D04800 UNIVERSAL & BALL POINT: SIZE 80 (2), 90 (4), 100 (2) – 8 COUNT
 M/C Code: MA, MB, MC, CA, CB, CC, CD, CE, EA, EB, EC

This combination pack is perfect for all your sewing needs. It includes both ballpoint needles for sewing knits and other stretch fabrics, as well as a universal needle for sewing woven fabrics like cottons, linens and silk.



4 INCH (10.3 CM) EMBROIDERY SCISSOR

#250014301

With an extra curved blade, this scissor is perfect for trimming threads when embroidering or clipping delicate narrow seams.



7.75 INCH (19.7 CM) SCISSOR

#250015801

This Multi-purpose scissor can be used for a variety of sewing and craft projects.



4 INCH (10.3 CM) TRIMMING SCISSOR

#250014701

With the pop of color on this scissor, you will never misplace them. Use for trimming seams and threads.



7 INCH (18 CM) BENT SHEARS

#250016101

Use these dressmaker shears for cutting light weight fabrics. Cut without lifting the fabric.



4.5 INCH (10.8 CM) THREAD SNIP

#250015101

These are useful for quickly trimming thread while at your sewing machine and for snipping off thread ends.



8 INCH (20.5 CM) BENT SHEARS

#250016201

Use these dressmaker shears to cut medium weight fabrics. Cut without lifting the fabric.



7 INCH (18 CM) SCISSOR

#250016401

Our 7 inch stainless steel sewing scissor is suitable for sewing and craft projects.



8 INCH (20.5 CM) SCISSOR

#250016501

Our 8 inch stainless steel sewing scissor is suitable for sewing and craft projects.



9.5 INCH (24.3 CM) PINKING SHEARS

#250016601

Sewing enthusiasts and crafters alike will love how quickly you can finish seam edges using these pinking shears.



9 INCH (23 CM) TAILOR SHEARS

#250019101

These professional shears are ideal for cutting heavy weight fabrics.



10 INCH (25.6 CM) TAILOR SHEARS

#250019201

These 10 inch professional shears are ideal for cutting heavy to extra heavy weight fabrics.



4.5 (11.5 CM) EMBROIDERY SCISSOR

#250019601

These short and sharp embroidery scissors feature a lightly curved blade for trimming threads and making detailed cuts in fabrics.



10 INCH (25.6 CM) TAILOR SCISSOR

#250019701

Our professional Tailor scissor in polished chrome are comfortable when cutting all types of fabrics.



8 INCH (20.5 CM) BENT SHEAR

#250022196

Use these 8 inch professional stainless steel textile scissors for cutting light to medium weight fabrics. Cut without lifting the fabric.



7 INCH (17.8 CM) SCISSOR

#250019901

This forged nickel chrome scissor is packaged in the perfect gift box, ready to offer to any sewing enthusiast.



9 INCH (23 CM) BENT SHEAR

#250022296

Use these 9 inch professional stainless steel textile scissors for cutting light to medium weight fabrics. Cut without lifting the fabric.



8 INCH (20.5 CM) SCISSOR

#250020396

These stainless steel scissors will cushion the fingers and cut cleanly through light to medium weight fabrics.



5 INCH (12.7 CM) SCISSOR

#250022696

These stainless steel scissors are ideal for clipping threads and trimming seams. You will want to keep a pair by your sewing machine, your serger and you're ironing station.



Red Dress Form

#DF150SM_RD

Perfect for fitting garments.

Get a perfect fit every time you sew a garment with this adjustable small to medium dress form. Foam backed for easy pinning and marking, features 12 dials to set to your size in seconds. Also includes a built in hem gauge for accuracy when hemming your projects.

- Bust sizes 33"– 40" (84cm – 101cm)
- Waist sizes 25"– 32" (64cm – 81 cm)
- Hip sizes 34"– 41" (86cm – 104cm)



Grey Dress Form

#DF151ML_GR

Perfect for fitting garments.

Get a perfect fit every time you sew a garment with this adjustable medium to large dress form. Foam backed for easy pinning and marking, features 12 dials to set to your size in seconds. Also includes a built in hem gauge for accuracy when hemming your projects.

- Bust sizes 40"– 46" (101cm – 116cm)
- Waist sizes 31"– 37" (78cm – 93 cm)
- Hip sizes 40"– 46" (101cm – 117cm)



Index

Alphabetical Order

BOBBINS & TOOLS

page 33

Bobbins (Class 15) page 33
 Bobbins (Class 15J) page 33
 Screwdriver (Small) page 33
 Screwdriver for Needle Plate page 33
 Seam Ripper / Brush page 33

DRESS FORMS

page 52

Gray, M-L page 52
 Red, S-M page 52

EXTENSION TABLES

page 28

Extension Table page 28
 Large Extension Table page 28

HOOPS

page 31

5" x 7" Embroidery Hoop page 31
 Endless Embroidery Hoop page 31

MACHINE CODES

page 4-7

CA page 5
 CB page 6
 CC page 6
 CD page 6
 CE page 6
 EA page 6
 EB page 7
 EC page 7
 MA page 5
 MB page 5
 MC page 5
 SA page 7
 SB page 7
 SC page 7

NEEDLES

page 41-45

Ballpoint page 41
 Denim page 43
 Embroidery page 43
 Heavy Duty page 42
 Leather page 42
 Metallic page 45
 Microtex page 42
 Miscellaneous page 45
 Overlock / Serger page 41
 Titanium page 45
 Topstitch page 43
 Twin page 44
 Universal page 41
 Wing page 44

OVERLOCK PRESSER FEET

page 35-38

Beading Foot - Overlock/Serger page 37
 Blind Hem Foot - Overlock/Serger page 35
 Elastic Foot - Overlock/Serger page 35
 Gathering Foot - Overlock/Serger page 36
 Lace Foot - Overlock/Serger page 37
 Piping Foot - Overlock/Serger page 38

SEWING MACHINE PRESSER FEET

page 9-28

¼" Piecing Foot page 25
 All-Purpose Foot page 9
 Beading Foot page 20
 Blind Hem Foot page 10
 Clear Open Toe Foot page 18
 Clear Open Toe Free-Motion Foot page 27
 Cording Foot page 19
 Couching Foot page 21
 Edge Joining Foot page 20
 Even Feed Foot page 27
 Free Motion / Darning Foot page 26
 Flower Stitch Foot page 23
 Gathering Foot page 14
 Invisible Zipper Foot page 12
 Manual Buttonhole Foot page 13
 Multi-Line Sewing Foot page 21
 Non-Stick Foot page 15
 Overcasting Foot page 14
 Patchwork (Quilting) Foot page 25
 Pintuck Foot page 19
 Piping Foot page 16
 Quilting Guide Attachment page 28
 Rolled Hem Foot page 15
 Roller Foot page 16
 Ruffler Foot page 22
 Satin Stitch Foot page 18
 Sew-On Button Foot page 13
 Side Cutter Attachment page 10
 Stitch-in-the-Ditch Foot page 26
 Zipper Foot page 11
 Universal Shank page 9

SCISSORS

page 46-51

4 Inch Embroidery scissor page 46
 4 Inch Trimming Scissor page 46
 4.5 Inch Embroidery Scissor - Curved Blade page 49
 4.5 Inch Thread Snip page 46
 5 Inch Scissor page 51
 7 Inch Scissor (Nickel Chrome) page 50
 7 Inch Scissor (Stainless Steel) page 48
 7 Inch Bent Shears page 47
 7.75 Inch Scissor page 47
 8 Inch Bent Shears page 47
 8 Inch Bent Shears (Stainless Steel) page 51
 8 Inch Scissor (Stainless Steel) page 48
 9 Inch Bent Shears page 51
 9 Inch Tailor Shears page 49
 9.5 Inch Pinking Shears page 48
 10 Inch Tailor Shears page 49
 10 Inch Tailor Scissor page 50



| © copyright 2019